


HS Models - Input/Output Connections

Input/Output Connector

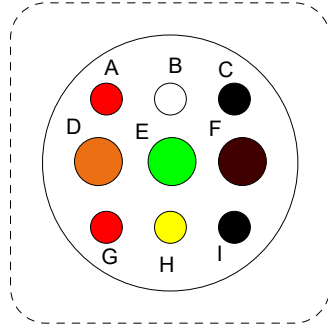

Canon 3102E24-11PB

Pin

- A - Output Positive Sense
- B - No Connection
- C - Output Negative Sense
- D - Input Positive
- E - Housing Ground
- F - Input Negative
- G - Output Positive
- H - Remote Turn On/Off
- I - Output Negative

This configuration is used in the following models:

611HS	618HS	721HS	728HS
621HS	628HS	737HS	738HS
637HS	638HS	749HS	752HS
649HS	652HS		